

The background of the entire page is composed of intricate, overlapping, and flowing blue lines that resemble smoke or liquid in motion. These lines vary in opacity, creating a sense of depth and movement. They are primarily concentrated on the left side and flow towards the right, filling the upper two-thirds of the page.

Cetis  | APPLIANCES
Teledex • TeleMatrix • Scitec

User Guide

K-100 & K-608

IMPORTANT SAFETY INSTRUCTIONS

IMPORTANT SAFEGUARDS

Please keep this instruction manual in a safe place, along with the warranty card, purchase receipt and carton for future reference. The safety precautions enclosed herein reduce the risk of fire, electric shock and injury when correctly adhered to.

When using electrical appliances, basic safety precautions should always be followed, including the following:

Read all instructions.

1. Do not attempt to repair, disassemble or modify the appliance.
2. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
3. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
4. Close supervision is necessary when any appliance is used by or near children.
5. Do not use outdoors.
6. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
7. The appliance should be placed on a flat surface when operating to avoid overturning.
8. The kettle is only to be used with the stand provided.
9. Do not remove the lid when boiling water. Be careful of the steam.
10. Do not move while the kettle is switched on.

11. Do not touch hot surfaces. Use handles or knobs.

12. To protect against fire, electrical shock and injury to persons, do not immerse cord, plugs, or the whole unit in water or other liquid.

13. Do not operate any appliance with a damaged cord or plug or after the appliance malfunction or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.

14. The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock or cause injuries.

15. Do not let cord hang over edge of table or counter, or touch hot surfaces.

16. Do not place on or near a hot gas or electric burner or in a heated oven.

17. Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to off, then remove plug from wall outlet.

18. Do not use appliance for other than intended use. Scalding may occur if the lid is removed during the brewing cycles.

19. Do not remove the lid when boiling water. Be careful of the steam.

SAVE THESE INSTRUCTIONS.

HOUSEHOLD USE ONLY.

Dear customers, thank you for purchasing Cetis electric kettle. For your proper use and maintenance of the electric kettle, please read this user manual carefully before use, which will help you use the product. If you have any doubt about the product or warranty, please contact us, and thank you again for your purchase!

PACKING LIST

The packaging box includes the following items:

- Electric kettle
- Power supply base
- User manual



Black K-100
Part Number: K11B (12 per case)

PRODUCT FEATURES

- Patented series design
- Three-layer design for all-round scald prevention
- Wide mouth design, easy to clean
- Dustproof spout design, hygienic water outlet and no residue
- Pure color silicone anti-skid base pad for protecting the surface of the high-grade furniture against dyeing and scratching
- International food grade 304 stainless steel inner container
- Molded scale for convenient observation
- Patented power plug which is easy to connect or disconnect
- Available in Black or Grey

OPERATING INSTRUCTIONS

1. Before filling the electric kettle with water, remove it from the power supply base.
2. The water level shall not be lower than the minimum (MIN) water level and higher than the maximum (MAX) water level, so as to avoid dry heating or boiling water spills.
3. After filling the electric kettle with water, replace the kettle lid, so as to prevent injury due to boiling water steam.
4. Connect the power cord plug of the power supply base of the kettle to the electric outlet, place the kettle on the power supply base, and turn on the power.
5. Toggle the switch to "I" position, and then the kettle begins to boil water; when the water is boiling, the switch jumps to "o" position automatically to cut off the power supply.
6. To repeat the heating, please wait dozens of seconds, and then toggle the switch; do not press and hold the switch by force, so as not to damage the electrical components.

ATTENTION

1. Before using this product, please read its user manual first.
2. This product can only be used for boiling water rather than cooking milk, coffee or milk tea.
3. The electric kettle must be used with the power supply base of the same model.
4. Do not turn on the power switch when it is empty.
5. The voltage in the place of use must be the same as the power supply voltage indicated on this product.
6. The electric outlet shall be a three-phase one with a good grounding.
7. Do not place this product close to the surface of a heat source or near a heat source.
8. Do not put the electric kettle or its power supply base in a wet place or immerse it in water.
9. Place the electric kettle out of reach of children, so as to avoid accidental burns.
10. Do not open the lid when the electric kettle is boiling water, so as to avoid accidental burns.
11. If the electric kettle fails during water boiling, immediately cut off the power, remove the electric kettle from the power supply base, and do not disassemble and repair it randomly.
12. If the electric kettle is too full, boiling water may be ejected.
13. If the power cord is damaged, it must be replaced by the maintenance department or a professional to avoid danger.
14. The water in the electric kettle shall be between the specified water levels, and shall be neither above the maximum water level nor below the minimum water level.

Attention Continued

15. If this product will not be used for a long time, be sure to pour away the remaining water in the electric kettle, and always keep the electric kettle dry.

16. A short power-supply cord should be used to reduce the risk resulting from becoming entangled in or tripping over a longer cord.

17. Extension cords are available and may be used if care is exercised in their use.

If extension cord is used:

1) The marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance; and

2) The cord should be arranged so that it will not drape over the counter top or tabletop where it can be pulled on by children or tripped over unintentionally.

If the appliance is of the grounded type, the extension cord should be a grounding-type 3-wire cord.

COMMON FAILURES AND SOLUTIONS

Failure	Solution
The electric kettle cannot boil water.	<ul style="list-style-type: none"> Check whether it is installed correctly and whether the power outlet is powered; if the failure still exists upon verification, please notify the maintenance department for maintenance.
The electric kettle does not operate when the switch is set to the "I" position.	<ul style="list-style-type: none"> Check whether it is powered, or replace the power supply base and try again; if the failure still exists, apply for maintenance.



TECHNICAL PARAMETERS

Product name: Electric kettle

Product model: K-100 & K-608

U.S. Rated power supply: 120V; 60 Hz

International Rated power supply: 220V-240V; 50 Hz

Rated power: 1200 W

Power cord: 0.9 M

Capacity: 0.8 L

Dimensions: 193 x 143 x 203 (LWH, Unit: mm) for K-100;

217 x 131 x 191 (LWH, Unit: mm) for K-608

Weight: 918 g

Certification: ETL & CE certification for safety

Material: The inner container uses food grade 304 stainless steel, and the rest uses food grade plastic material

Black K-608
Part Number: K6081B (12 per case)





Black K-100
Part Number: K11B (12 per case)

The background of the entire page is an abstract, flowing pattern of light blue and white, resembling smoke or liquid waves. The pattern is composed of many overlapping, curved lines that create a sense of movement and depth. The colors range from very light, almost white, to a medium blue.

www.cetisappliances.com

**4975 N. 30th Street
Colorado Springs, CO 80919**

**info_USCA@cetis.com
Telephone +1 719 638 8821
Fax +1 719 638 8757**

© 2022 Cetus, Inc. Cetus, Inc. is a U.S. corporation, incorporated in the State of Delaware and headquartered in Colorado. Product specifications and descriptions in this document subject to change without notice. Cetus® is trademarked or registered trademarks of Cetus, Inc.

CTS-APP-UGKT-112022